



KONFIGURACJA KARTY IOT



EVER Sp. z o.o. ul. Wołczyńska 19, 60-003 Poznań www.ever.eu, ups@ever.eu tel. +48 61 6500 400, faks +48 61 6510 927

SPIS TREŚCI

INFORMACJE OGÓLNE

Wbudowana karta umożliwia:

- Komunikację zasilacza UPS z chmurą IoT (wymiany danych)
- Może pełnić funkcję serwera Modbus TCP

OPIS KARTY

Logowanie

3

W celu połączenia się z kartą należy w oknie przeglądarki (zaleca się używanie przeglądarki **Google Chrome** lub **Edge**) wpisać adres IP karty. Adres karty wyświetlany jest w menu zasilacza w oknie *Identyfikacja - > Ethernet IP*. Podczas pierwszego logowania wymagana jest zmiana hasła. Domyślne parametry autoryzacji karty to:

- Username (użytkownik): admin
- Password (hasło): Admin*1

User Name admin	
Current Password *	
New Password *	
✓ Be at least 8 cha	racters
🗸 At least 1 letter	
 At least 1 number 	r
Vot same as Use	r Name or Full Name
Confirm Password	d *

Rysunek 1: Zmiana hasła

Nowe hasło musi składać się z: co najmniej 8 znaków, zawierać co najmniej 1 literę oraz 1 cyfrę. Nie może być takie samo jak nazwa użytkownika.

Strona główna karty

Po zalogowaniu wyświetlana jest strona główna.

×	IoT setting portal	Overview					A
di j	Overview	Device Information		IOT Information		Wireless Information	
۵	Settings	Model Name	RT PRO 1000	Device GUID	81100ea0-c3d1-4cb6- 92aa-ee02a84099aa	Wireless Signal Strength	
=	Logs	UPS FW version	00.02.14805	IOT Connection status reason	IoT disabled	Wireless Connection Status	Wireless dongle is unplug
	0-	UPS Serial number	CP10P1050290001	IOT Connection Status	Unconnected	Wiseless Connection Status	Wireless dende unplug
<u>N</u>	License Information	IOT Device Firmware Version	01.06.049			wireless connection status	wireless dongre unplug

Rysunek 2: Widok strony głównej

Menu karty podzielono na cztery Submenu: Overview, Settings, Logs oraz Licence Information.



Menu Overview

W menu Overview wyświetlane są informacje dotyczące zasilacza UPS (model oraz numer seryjny, wersja firmware zasilacza oraz wersja firmware karty IoT), status połączenia IoT oraz połączenia bezprzewodowego.

Overview A							
Device Information		IOT Information		Wireless Information			
Model Name	RT PRO 1000	Device GUID	81100ea0-c3d1-4cb6- 92aa-ee02a84099aa	Wireless Signal Strength			
UPS FW version	00.02.14805	IOT Connection status reason	IoT disabled	Wireless Connection Status	Wireless dongle is unplug		
UPS Serial number	CP10P1050290001	IOT Connection Status	Unconnected	Wireless Connection Status	Wireless dongle unplug		
IOT Device Firmware Version	01.06.049						



4

Menu Settings

Menu Settings podzielone zostało na cztery Submenu:





Submenu Preference

Zakładka **Preference** umożliwia skonfigurowanie daty i czasu. Istnieje możliwość ręcznego wprowadzenia czasu lub wskazanie serwera SNTP, z którego dane mają być pobierane oraz określenie strefy czasowej. W zakładce tej istnieje również możliwość zresetowania i przywrócenia karty do ustawień fabrycznych.

0	Date and Time	,		Device Actions		^
	Set Time Wed Nov 08 2023 14:48:48 GMT+0100			Reboot or Reset Device 0		•
	SNTP Operation Enable Enable	Enable	di	Web Session Settings		^
	SNTP server 1 time.windows.com	time.windows.con		User account Inactivity timeout	900	Second
	SNTP server 2 0.pool.ntp.org	0.pool.ntp.or		Maximum Concurrent Sessions		1
	SNTP server 3 1.pool.ntp.org	1.pool.ntp.or		User Absolute Timeout	21600	Second
\bigcirc	Locale	,		21600 Seconds	21000	becond
	Timezone	GMT/UTC		User Lock Time 300 Seconds	300	Second
	GMT/UTC Date Format mm/dd/yyyy	mm/dd/yyyy		Maximum Failed Login Attempts 10	_	10
	Time Format 24Hrs	24Hrs		User 1 Password Complexity setting Password Complexity Level 1	Password Complexity	Level 1 🔻

Rysunek 6: Okno Preference

5

Submenu Network

Menu konfiguracji sieciowej. Administrator może skonfigurować funkcję DHCP, która jest domyślnie włączona, adres IP karty (w przypadku wyłączonego DHCP), serwer DNS, serwer Proxy, włączenie / wyłączenie Modbus TCP, włączenie / wyłączenie HTTP.

0	Certificate	^	<	Wireless	/
	Certificate	Download Certificate		Method of wireless IP Allocation DHCP Allocated	DHCP Allocated
<	WAN	^		Present Wireless IP Address	
	Default WAN Port Wireless	Wireless 👻		0.0.0.0 IP Present Wireless Subnet Mask	
	DNS1 IP Address 192.168.177.246 IP	192.168.177.246 IP		0.0.0.0 IP	
	DNS2 IP Address 8.8.8.8 IP	8.8.8.8 IP		Present Wireless Default Gateway 0.0.0.0 IP	
<	Ethernet	^		Wireless station mode ssid testssid	testssi
	Method of IP Allocation DHCP Allocated	DHCP Allocated 🗸		Wireless station mode password	************
	Present Ethernet IP Address 192.168.177.69 IP		<	Modbus TCP	
	Present Ethernet Subnet Mask 255.255.255.0 IP			Modbus TCP Com Timeout 0 milliseconds	0 millisecon
	Present Ethernet Default Gateway 192.168.177.254 IP				
0-1	IP Whitelist	^	0-	Access Control	
	Trusted IP Adress filter white list 255.255.255.255,192.168.1.255.255.255.255.2 55 IP	255.255.255.255,192.1 UP		IOT Enable or Disable Disable	Disabl
t↓	Proxy Settings	^		Modbus TCP Disable	Disable
	Proxy Enable Disable	Disable 👻		HTTP Disable	Disable
7	Access Control	^		Remote Debug Disable	Disable
	IOT Enable or Disable Disable	Disable 👻		CORS Origin Type	(*) - allows all Origin
	Modbus TCP Disable	Disable 👻			
	HTTP Disable	Disable 👻			
	Remote Debug Disable	Disable 👻			
	CORS Origin Type (*) - allows all Origin	(*) - allows all Origin 👻			

0-7	Access Control	^		<	Ethernet	^
	IOT Enable or Disable	Disable 👻				Statically Hardcoded
	Modbus TCP	Disable -			Method of IP Allocation DHCP Allocated	DHCP Allocated
	Disable	Disable 👻			Durana ta fala ana ta 10 A dalara a	Taken From NV
	HTTP Disable	Disable 👻			Present Ethernet IP Address 192.168.177.69 IP	DIP Switch Configure
	Remote Debug Disable	Disable 👻			Present Ethernet Subnet Mask 255.255.255.0 IP	
	(*) - allows all Origin	(*) - allows all Origin (Active device IP) - allows Origi	n with device IP		Present Ethernet Default Gateway 192.168.177.254 IP	
	IP Whitelist		^	<	Modbus TCP	^
	Trusted IP Adress filter white list 255.255.255.255,192.168.1.255,255.255 55 IP	.255.2 255.255.255.2	55,192.1 IP		Modbus TCP Com Timeout 0 milliseconds	0 millisecond
	Trusted IP Adress filter white list 255,255,255,255,192,168,1,255,255,255 55 IP Proxy Settings	.255.2255.255.255.2	55,192.1+IP	0	Modbus TCP Com Timeout 0 milliseconds Certificate	0 millisecond
	Trusted IP Adress filter white list 255.255.255.255.192.168.1.255.255.255 55 IP Proxy Settings Proxy Enable Disable	.255.2255.255.255.2	55,192.1+IP Disable Enable	Ø	Modbus TCP Com Timeout ⁰ milliseconds Certificate Certificate	0 millisecond:
	Trusted IP Adress filter white list 255.255.255.255.192.168.1.255.255.255 55 IP Proxy Settings Proxy Enable Disable	.255.2 255.255.255.2	Disable Enable	@ <	Modbus TCP Com Timeout o milliseconds Certificate Certificate WAN	0 millisecond:
	Trusted IP Adress filter white list 255.255.255.255.192.168.1.255.255.255 55 IP Proxy Settings Proxy Enable Disable	.255.2255.255.2	55,192.1+IP A Disable Enable	@ <	Modbus TCP Com Timeout 0 milliseconds Certificate Certificate WAN	0 milliseconds
	Trusted IP Adress filter white list 255.255.255.255.192.168.1.255.255 S5 IP Proxy Settings Proxy Enable Disable	.255.2 255.255.255.2	Disable Enable	?	Modbus TCP Com Timeout o milliseconds Certificate Certificate WAN Default WAN Port Wireless	0 millisecond:
	Trusted IP Adress filter white list 255.255.255.255.192.168.1.255,255.255 55 IP Proxy Settings Proxy Enable Disable	.255.2 255.255.2	Disable Enable	@ <	Modbus TCP Com Timeout 0 milliseconds Certificate Certificate WAN Default WAN Port Wireless DNS1 IP Address 192.168.177.246 IP	0 millisecond: Download Certificate Ethernet Wireless 192.168.177.246 IP

Rysunek 7: Okno Network

Submenu Firmware

7

Menu aktualizacji firmware karty IoT.



Rysunek 7: Okno Firmware

Submenu User Management

Za pomocą menu istnieje możliwość edycji konta Administratora jak również dodanie kolejnych użytkowników z nadaniem im uprawnień.

Settings					
Preference	Network	Firmware	User Management		
⊕ Add 🔿 R	teset				
ull Name	Role	User Name	Last Login	Password Change Due	
dministrator	Admin	admin	8.11.2023, 14:41:30	1 Day	Fdit Delete
Add Nev	v User		×		
Full Nam	e *				
User Nan	ne *				
Password C	omplevity			Admin	
0	Shiplexity		•	Fasiasau	
Password	d Timeout Day	′S *		Engineer	
				Operator	
New Pass	sword *				
Confirm I	Password *			Viewer	
User Role					
Admin			•		
Cance	el	Save			



Menu Logs

Okno z listą zdarzeń wraz z datą i czasem ich wystąpienia. Istnieje możliwość wyeksportowania listy do pliku .csv

Logs				A
List of Logs Total Logs Count: 39				Clear Logs Export Logs
		Audit-User Log		
Set Time	Logging Event	Logged user name	IP Address	Port
27.03.2023 13:33:32	User logged in event	admin	192.168.177.64	HTTPS Port
27.03.2023 13:34:29	User logout	admin	192.168.177.64	HTTPS Port
27.03.2023 13:34:29	Admin user logged event	admin	192.168.177.64	HTTPS Port
27.03.2023 13:34:29	Other user password change	admin	192.168.177.64	HTTPS Port

Rysunek 9: Menu Logs

9